


Wiring guide: JPB Datec Microphone Breakout box

Warning: Disconnect Battery (or Transformer) before working on any wiring !

CONNECTION TO
DATEC CONTROLLER

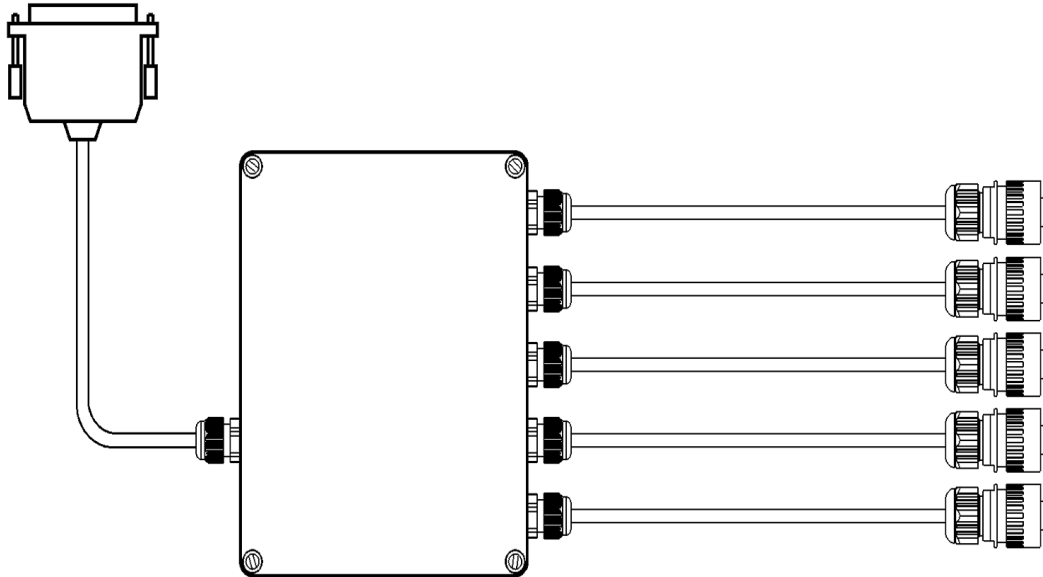

5 x 3 CORE MICROPHONE CABLES FITTED WITH
FEMALE "HIRSCHMANN" 4 PIN CONNECTORS




Wiring side of socket

Pin 1 - Brown (Lamp +)
Pin 2 - Green/Yellow (Com -)
Pin 3 - Blue (Audio Signal)
Pin 4 - Not used

Note: Pin 4 marked \perp

Assemble socket components as shown, use the rubber insert with the smaller centre hole (discard the other one)
After wiring fit the front section to the body and screw together firmly before tightening the rear gland nut.

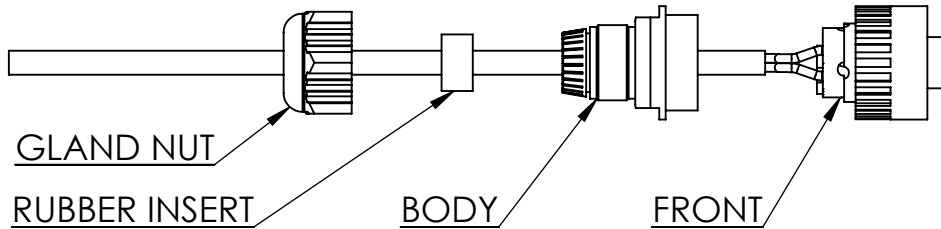

Promatic International Ltd.
Hooton Road
Hooton
South Wirral
CH66 7PA
www.promatic.co.uk
Helpline: 44 (0)151 327 2220

Promatic Inc.
801, Mid America Drive,
Plattsburg,
MO 64477
USA
Website: www.promatic.biz
Helpline: 1 888 767 2529 (Toll free)

