




Operating Instructions Game Trailer Radio

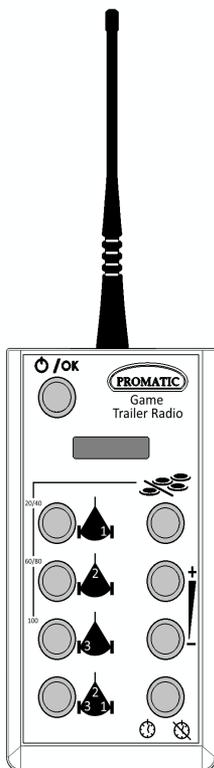

WARNING.

Clay target launchers can be dangerous and must be treated with great care at all times to avoid accidents. Never place any bodily part into the path of any mechanical piece whilst the machine is in motion or likely to be so.

You must treat a clay target launcher with the same caution that you would treat a loaded gun. Assume at all times that a clay target launcher is armed and loaded and treat it accordingly



This document must be read in full before attempting to operate the machine

About the Game trailer radio

The radio control handset provided enables you to run pre-programmed flushes, fire each trap individually or fire all three simultaneously.

Sporting Mode

Pressing the Mode button will toggle between Simulated Game / Sporting mode. In Sporting mode, the three traps can be fired directly from the numbered buttons or the button below this group can be used to throw all three traps simultaneously.

Simulated Game Mode

The controller has as standard 20, 40, 60, 80 & 100 bird flushes (Buttons 1-3). To use these flushes first select simulated game mode using the Mode button and then press the corresponding numbered button to select the flush you wish to shoot. A double push on button 1 will select the 40 bird flush, a double push on button 2 will select the 80 bird flush.

The screen will display the name of the flush you have selected along with “select sequence” press the OK button to confirm selection.

The screen will then display the last used flush speed and the message “select speed” select the desired speed (see below) and then press the OK/Start button to confirm selection. The screen will then display “ON = Start/Pause”. Upon pressing the OK/Start button the controller will emit 3 beeps then begin throwing the flush. The first line of the display will give a count down showing the birds remaining, whilst the second line will show which traps are currently throwing.

Pausing / Escaping from a flush

Push the OK/Start button to pause a flush, and push it again to re-commence. To abort a flush once commenced, pause it using the OK/Start button and then press the Mode button. The controller will return to the flush selection menu.

Speed control

Speed Control Up/Down Can be used to increase or decrease the speed of the a flush whilst it is in progress as well as during its selection.

Solo Delay


In Sporting mode this button toggles the delay on or off, when ON the controller will pause for 3 seconds before throwing the selected target, emitting 3 beeps as it does so, allowing the shooter time to put down the radio and mount his gun.

Switching off

The radio can only be turned off when in Sporting mode. Toggle into Sporting using the mode button then press and hold the OK/Start button for about 2 seconds to turn off the handset. If left unused for approximately 10 minutes the handset will automatically turn off. (when powered up again the controller will have been reset and any paused flush will have been lost)

Batteries

The handset is powered by 4 x AA size batteries (Alkaline batteries recommended), which can be changed by removing the rear cover to allow access.

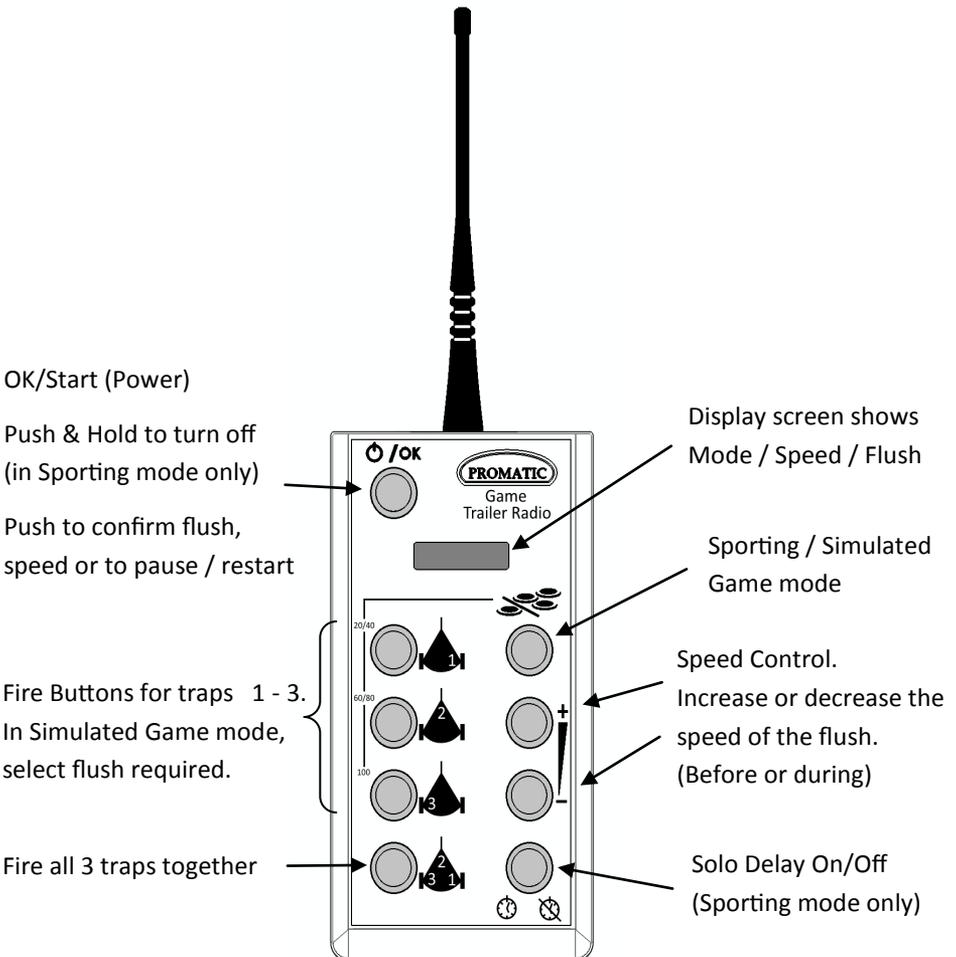



Promatic International Ltd.

**Hooton Road
Hooton
South Wirral
CH66 7PA
United Kingdom**

Tel: +44 (0) 151 327 2220 (General)
+44 (0) 1407 860800 (Sales)
Fax: +44 (0) 151 3277075

E-mail info@promatic.co.uk

Website: www.promatic.co.uk

**Promatic Inc.
801, Mid America Drive,
Plattsburg.
MO 64477
USA**

Toll Free: 888.767.2529
Fax: 816.539.0257

E-mail: sales@promatic.biz

Website: www.promatic.biz