




*Claymate... Technology that Counts*

## Wi-Card Claymate (All versions) User Manual addendum

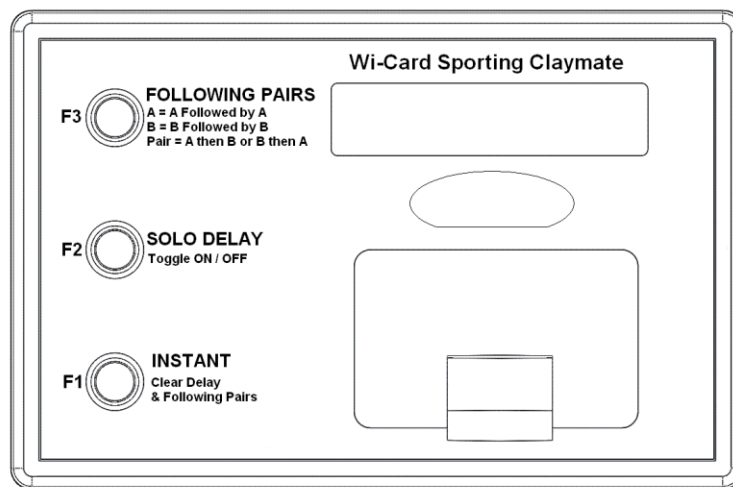

(To be read in conjunction with section 3.0 of the relevant *Claymate* user manual)

The following feature has been added within the Service Menu:

### Card security key setting

Newer software versions (6.0 and above) feature an enhanced security mode known as Extreme mode, shooters cards created for older controller versions will not function in a Controller with the Extreme setting until they have been re-validated as Extreme cards.

If this controller is an addition to an existing ground and Extreme mode is not in use at the ground it will need to be turned off (i.e set to Default) to enable the Controller to read existing shooter cards.

- In the key setting menu press **F2** to toggle between Extreme and Default modes.

Keys are Extreme  
F1=Scroll F2=Set

Keys are Default  
F1=Scroll F2=Set