



# Wiring guide: Command Cables

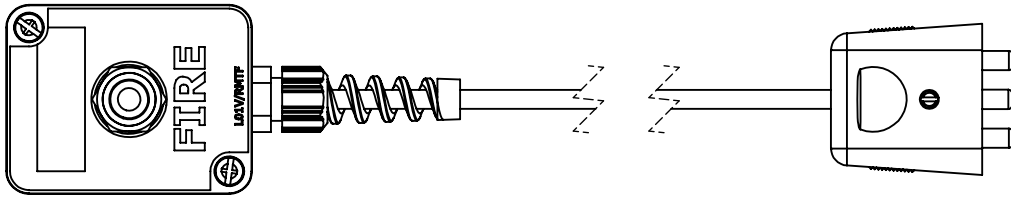


CABLES FITTED WITH "DURAPLUG" OR "PERMAPLUG" CONNECTOR

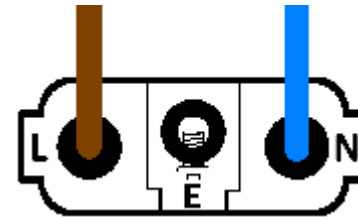

Wiring side of plug

Pin L - Brown  
Pin E - Not used  
Pin N - Blue

Note: Pin E may be marked  $\perp$

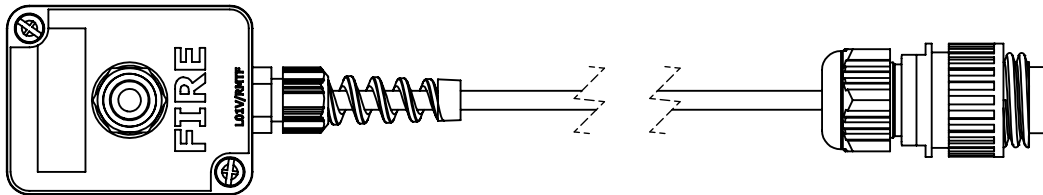


CABLES FITTED WITH "HIRSCHMANN" 4 PIN CONNECTOR



Wiring side of plug

Pin 1 - Not used  
Pin 2 - Brown  
Pin 3 - Blue  
Pin 4 - Not used

Note: Pin 4 marked  $\perp$

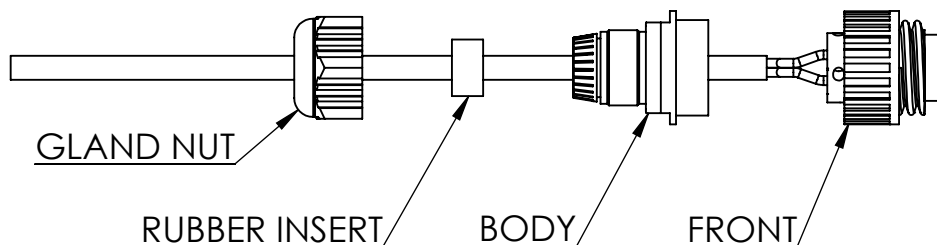

Assemble plug components as shown, use the rubber insert with the smaller centre hole (discard the other one)  
After wiring fit the front section to the body and screw together firmly before tightening the rear gland nut.

**Promatic International Ltd.**  
Hooton Road  
Hooton  
South Wirral  
CH66 7PA  
[www.promatic.co.uk](http://www.promatic.co.uk)  
Helpline: 44 (0)151 327 2220

**Promatic Inc.**  
801, Mid America Drive,  
Plattsburg,  
MO 64477  
USA  
Website: [www.promatic.biz](http://www.promatic.biz)  
Helpline: 1 888 767 2529 (Toll free)

