


Wiring guide: Promatic Radios (Baton Receiver)

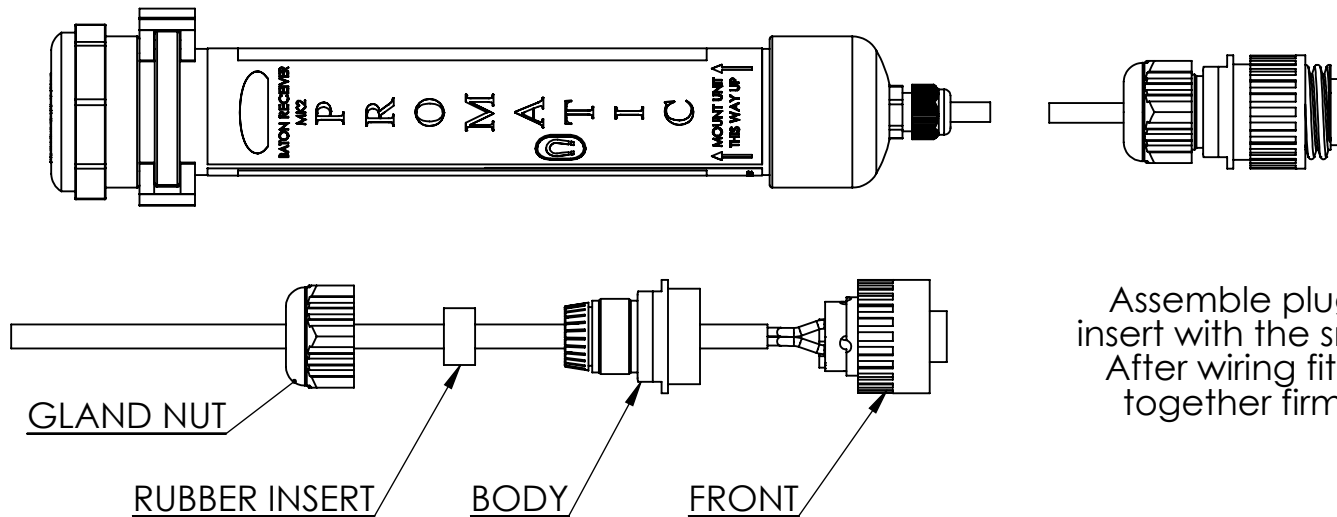


Assemble plug components as shown, use the rubber insert with the smaller centre hole (discard the other one) After wiring fit the front section to the body and screw together firmly before tightening the rear gland nut.



Wiring side of plug

- Pin 1 - No. 1
- Pin 2 - No. 2 & Green/Yellow
- Pin 3 - No. 3
- Pin 4 - Not used

Note: Pin 4 marked \perp

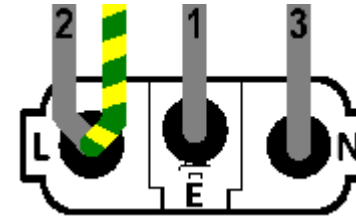

Wiring side of plug

- Pin L - No. 2 & Green/Yellow
- Pin E - No. 1
- Pin N - No. 3
- Cores 4,5 & 6 are not used

Note: Pin E may be marked \perp

Note: Baton Radio receivers are not normally fitted with this type of plug, the wiring is shown for compatibility only and full functionality cannot be guaranteed.